

Fitting Instructions

Steering Rack

1. Remove the road wheel.
2. Slacken and remove the track rod end retaining nut.

Installation Tip:

The steering gaiter fitting cone allows the renewal of the steering rack gaiter without removing the track rod end. There is no need to re-track the vehicle which saves on fitting time.

3. Remove the old gaiter and ties.
4. Pull the swivel pin towards you and place the cone onto pin (this is provided with the kit).
5. Lubricate the fitting cone and the inside of the gaiter using **CSP50** lubricant.

Installation Tip:

Check the cone for sharp edges or rough areas. Smooth with emery cloth if necessary

6. Carefully pull large end of the steering rack gaiter over the fitting cone and then gently ease the small end over.
7. Remove the cone, secure the steering gaiter with enclosed ties after topping up the rack with the correct lubricant via the small end of the gaiter.

Installation Tip:

Check the car owner's manual to determine which lubricant is required.

8. Before securing the steering gaiter in place ensure that it is not twisted, overstretched or compressed (Fig.1).
9. Refit the track rod end to the control arm and tighten retaining nut to correct torque.

Installation Tip:

Check the car owner's manual to determine the correct torque setting.

10. Refit the road wheel.

